



Listening Safely

To protect your hearing when using earphones, set the volume to the lowest setting before you begin listening, then adjust it to a comfortable level. Wearing earphones while driving a car or riding a bicycle can create a traffic hazard and could be illegal in some areas.

FCC Statement

This device complies with Part 15 of *FCC Rules*. Operation is subject to the condition that this device does not cause harmful interference.

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by:

- moving your radio from the receiver
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using the radio.



 
OPTIMUS®

AM/FM Stereo Wrap Around Headset Radio

- External Audio Input for CD, Tape or Other Source
- Wrap-Around Styling
- Extended Bass
- 27 mm Diameter Speakers
- 56-Hour Battery Life

Owner's Manual

Cat. No. 12-927



Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

(continued)

(continued)

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Fl., Fort Worth, TX 76102

We Service What We Sell

04/99

Caring for Your Radio

To enjoy your radio for a long time:

- Handle it gently.
- Keep it away from dust, moisture, and temperature extremes.
- Clean it with a damp cloth. Do not use harsh chemicals.
- Do not take it apart. If something is wrong with the radio, take it to your local RadioShack store for assistance.

 
RadioShack
A Division of Tandy Corporation
Fort Worth, TX 76102

07A99

Printed in Hong Kong



INSTALLING THE BATTERY

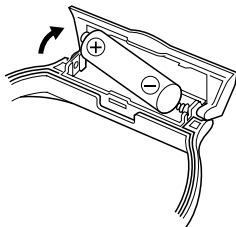

1. Lift the battery compartment cover in the direction of the arrow.
2. Insert one AAA battery (not supplied) into the compartment, according to the polarity marks (+ and -) inside.

Caution: Always use a fresh battery of the required size and recommended type.

3. Close the cover.

 
USING THE HEADSET RADIO

BAND/POWER — slide to **AM** or **FM**, or **OFF** to turn off the radio.

TUNING — rotate to select the desired station frequency (appears in the dial window).

Notes:


- A strong FM stereo signal automatically switches the radio to stereo from monaural.
- A CD or other source plugged into **SOURCE** disables **VOL** and **E-BASS**. Use the controls on the CD or cassette player to adjust the sound.

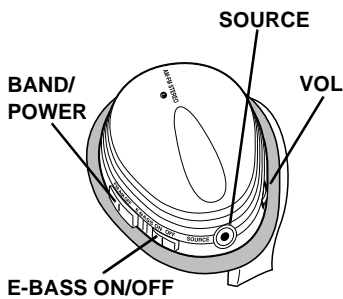


VOL — rotate to adjust the volume (see "Listening Safely").

SOURCE — plug in an alternate input source, such as a CD or cassette player, using a shielded cable with an 1/8-inch plug.

 E-BASS ON/OFF — slide to **ON** to enhance the bass sound.

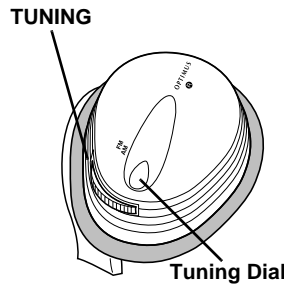


Battery Compartment

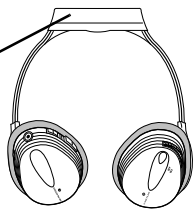 

© 1999 Tandy Corporation.
All Rights Reserved.
RadioShack and Optimus are registered trademarks used by Tandy Corporation

WEARING THE HEADSET

 For the best fit, position the headset so the foam pads beneath the headband clips rest on your ears. Adjust the headset's angle for comfort and performance.

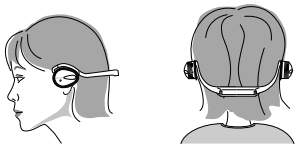

SPECIFICATIONS

AM	530–1710 kHz
FM	88–108 MHz
Output Power	12 mW + 12 mW
Power Source	One AAA Battery
Current Drain (no signal):	7.4mA (AM), 12mA (FM)
Alkaline Battery Life	
0.5 mW AM	About 69 Hours
0.5 mW FM Stereo	About 56 Hours
Dimensions (HWD) ...	6 ³ / ₈ × 6 ¹ / ₈ × 2 ⁵ / ₈ Inches
	(162 × 156 × 66 mm)
Weight (without battery)	3.5 oz (100 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.